CRUISE CONTROL MAIN SWITCH

COMPONENTS

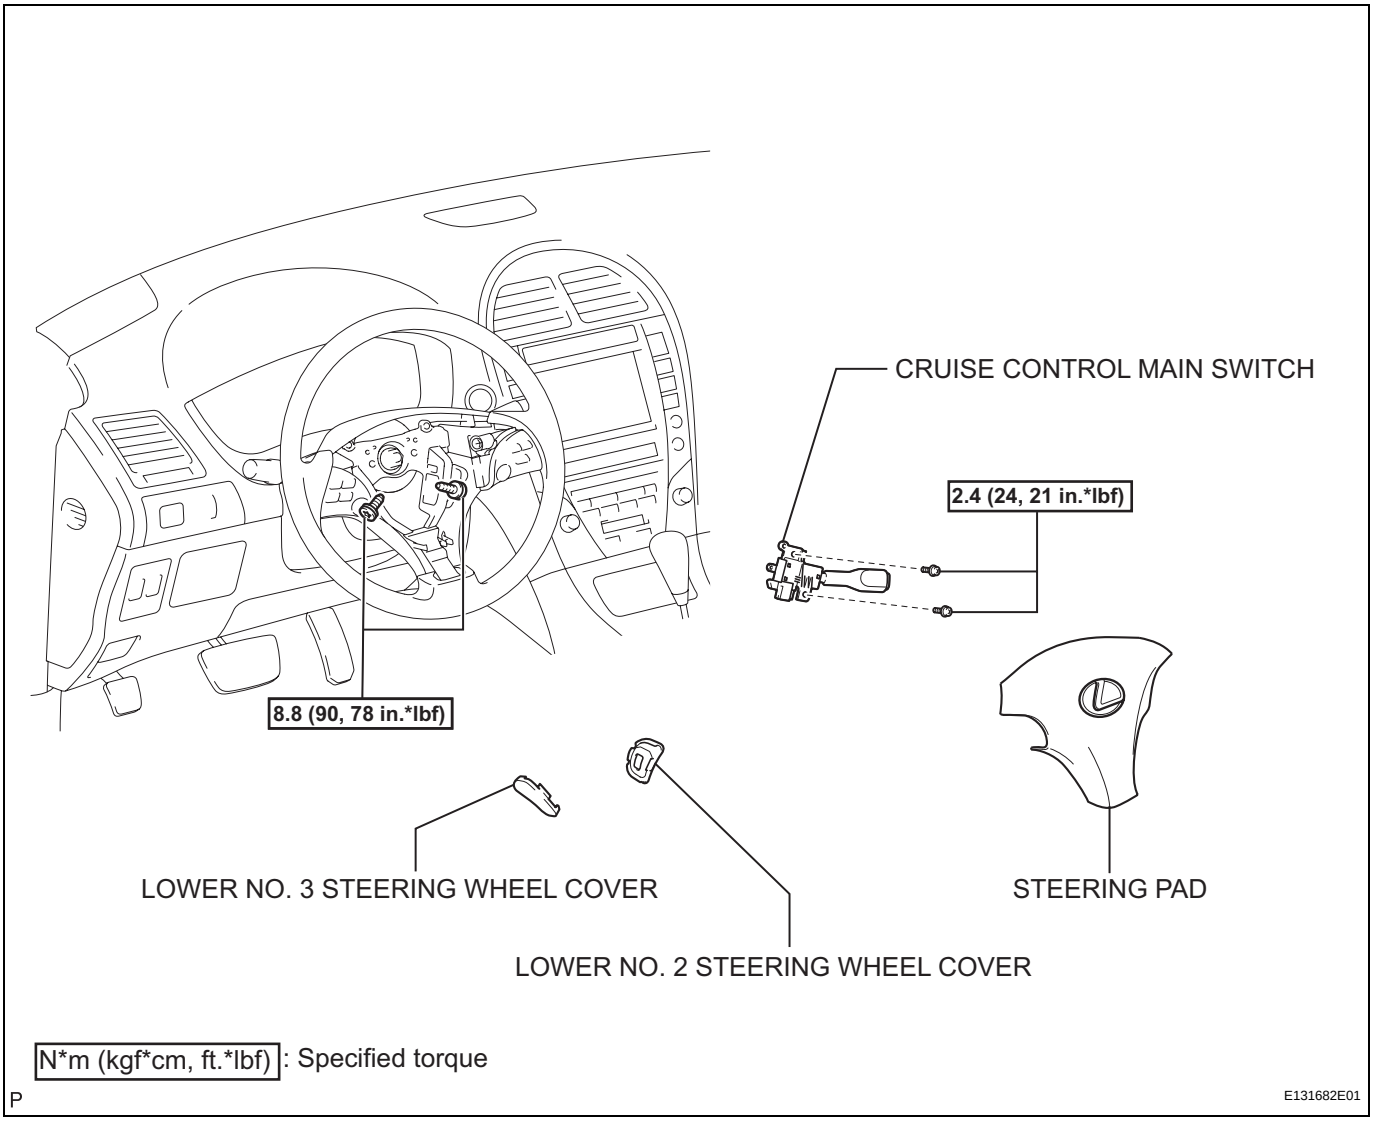
CRUISE CONTROL MAIN SWITCH
2.4 (24, 21 in.*lbf)
8.8 (90, 78 in.*lbf)
LOWER NO. 3 STEERING WHEEL COVER
STEERING PAD
LOWER NO. 2 STEERING WHEEL COVER

N*m (kgf*cm, ft.*lbf): Specified torque

P

E131682E01

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
   CAUTION:
   Wait for 90 seconds after disconnecting the cable to prevent airbag deployment (See page RS-1).
2. **REMOVE LOWER NO. 3 STEERING WHEEL COVER (See page RS-367)**
3. **REMOVE LOWER NO. 2 STEERING WHEEL COVER (See page RS-367)**
4. **REMOVE STEERING PAD (See page RS-367)**
5. **REMOVE CRUISE CONTROL MAIN SWITCH**
   (a) Disconnect the connector.
   (b) Remove the 2 screws and the cruise control main switch.

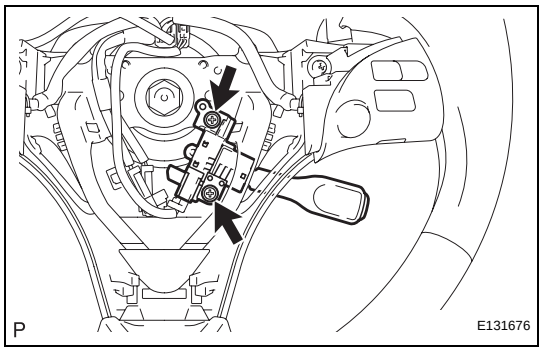

CC